


Staircase Application Guideline




0208 894 4984 www.tfpflooring.co.uk




- 1. Measure each tread and riser of the stair flight
- 2. Measure the width of the balcony/ground floor to the far edge

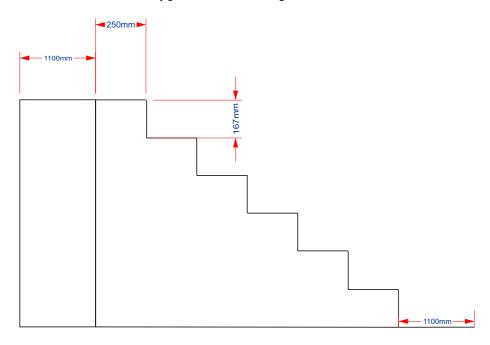


3. Add measurements of treads, risers and balcony/ground floor widths then cut mat to size

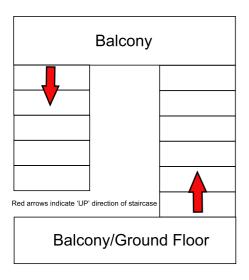


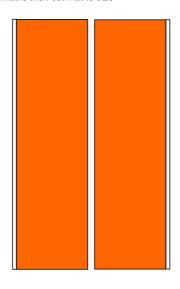


- 4. Pull back approximately 24 inches of release paper
- 5. Ensure that white, overlapping strip is on the inside of the staircase
- 6. Apply adhesive side of Stickymat to the far edge of the balcony/tread

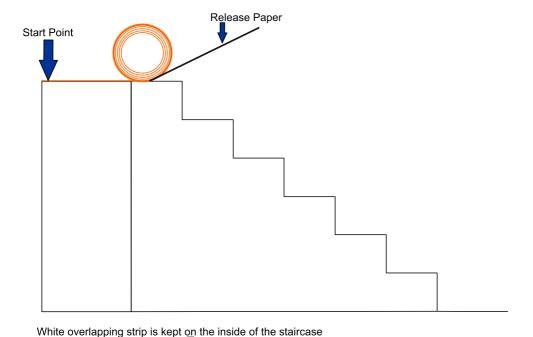

Balcony

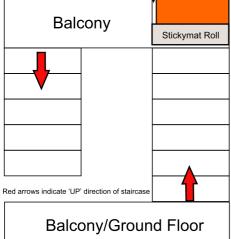

- 7. Pull out the release paper, while smoothing down Stickymat to the surface
- 8. Continue with each tread and riser until you reach the end of the lower riser/balcony

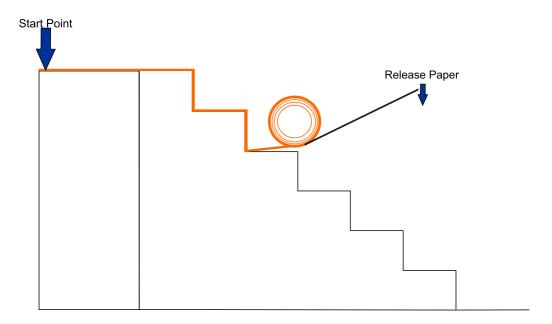


Balcony

Stickymat Roll


Red arrows indicate 'UP' direction of staircase

Balcony/Ground Floor


9. The stair flight and balcony/ground floor are now covered with one, continuous sheet of Stickymat

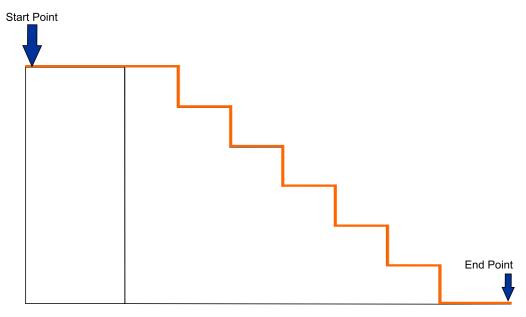


White overlapping strip is kept on the inside of the staircase

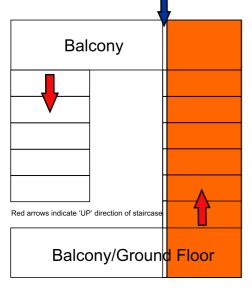


10. Repeat the same process for you next flight of stairs.

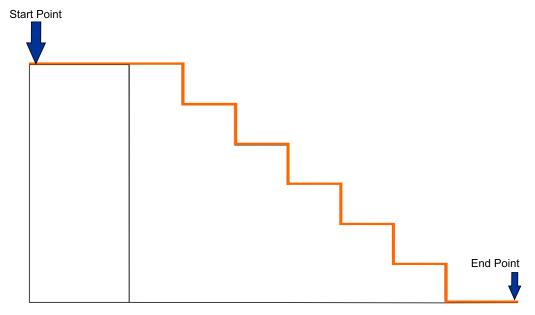

White overlapping strip is kept on the inside of the staircase

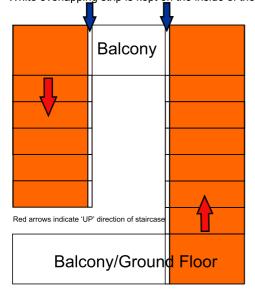


11. Measure and cut Stickymat to fill balcony void area. Measurement must include the total width of the overlapping strip so that the adhesive side covers the lap completely

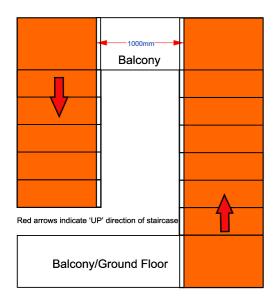




12. Apply strip to complete balcony protection

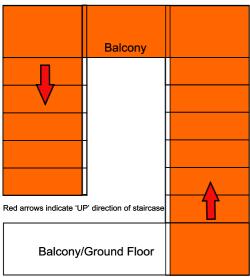

13. Where you come to the end of a roll that does not cover a full flight of stairs, always finish at the bottom of the riser

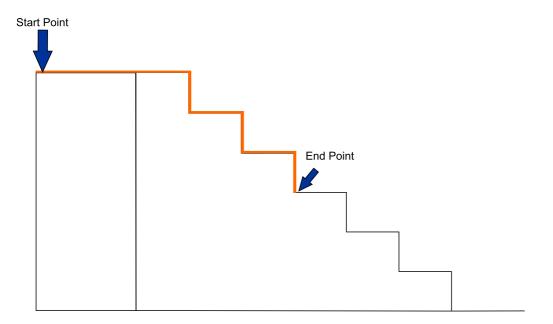

14. Begin the next roll at the start of the following tread

